



**HIGH PERFORMANCE
STAINLESS STEEL EXHAUSTS**

SCHEMA DI MONTAGGIO - ASSEMBLY SCHEDULE

COD. **58.0436.00**

REV. **00** DEL. **02/11/2009** TEC-LOG **G.D.**

Descrizione **BMW E90 - E91 - E92**

Fig. 1

-  Togliere la copertura di plastica sotto la vettura;
-  Remove the plastic covering under the car;
-  Enlever la couverture en plastic au dessous de la voiture;
-  Sacar la cobertura de plástica debajo del coche;
-  Entfernen Sie die Plastikabdeckung unter dem Auto;



Fig. 2

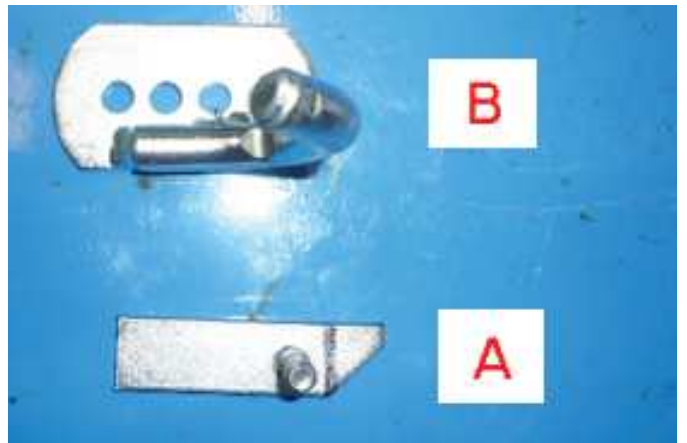







Fig. 3

-  Inserire la staffa (A) e fissare la staffa (B);
-  Insert the bracket (A) into the hole and fix the bracket (B);
-  Insérer l'étrier (A) dans le trou et fixer l'étrier (B);
-  Insertir el estribo (A) en al agujero y fijarlo (B);
-  Fügen Sie die Schelle (A) in das Loch ein und fixieren Sie die Schelle (B);





**HIGH PERFORMANCE
STAINLESS STEEL EXHAUSTS**

Fig. 4




-  Infine montare lo scarico previsto per il sottoparaurti del modello BMW 335i.
-  Finally install the rear silencer specific for the rear apron of the BMW model BMW 335i.
-  Enfin installer l'échappement prévu pour le pare-choc des modèles BMW 335i.



Fig. 5



-  En final, instalar el escape específico para el bajo-paragolpes de los modelos BMW 335i.
-  Schliesslich installieren Sie den Schalldämpfer spezifisch für die Heckschürze der Model BMW 335i.

Fig. 6

Fig. 7