

SCHEMA DI MONTAGGIO - ASSEMBLY SCHEDULE

COD. **58.1125.00**

REV. **00**

DEL. **21/02/2025**

TEC-LOG **G.D.**

Descrizione **Alfa Romeo Junior(966)**

Fig. 1

 Prima di modificare il paraurti originale bisogna spostare il sensore per l'apertura del bagagliaio posteriore.

 Before modifying the original bumper, you must move the sensor for opening the rear trunk.

 Avant de modifier le pare-chocs d'origine, vous devez déplacer le capteur d'ouverture du coffre arrière.

 Antes de modificar el paragolpes original, mover el sensor de apertura del maletero.

 Bevor Sie die Originalstoßstange modifizieren, müssen Sie den Sensor zum Öffnen des hinteren Kofferraums verschieben.



Fig. 2



Fig. 3

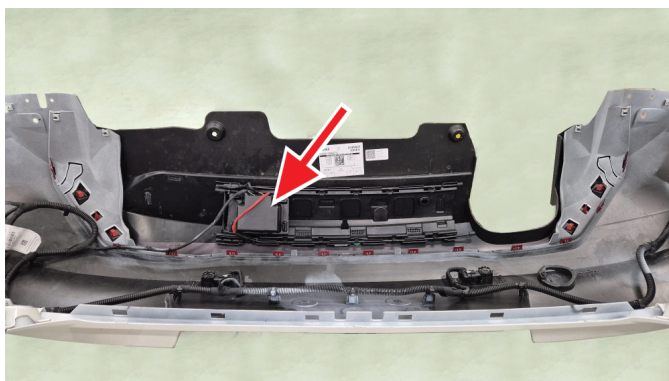


Fig. 4

 Dopo aver fatto il taglio sul paraurti per alloggiare i terminali di sinistra montate la staffa di supporto in dotazione.


 After having cut bumper to fit the left end tips, you can mount the bracket provided.

 Après avoir découpé le pare-chocs pour placer les embouts de gauche, montez le support fourni

**Fig. 5**

 Después de haber cortado el paragolpes para alojar las colas izquierdas, montar el soporte incluido.

 Nach dem Ausschnitt am Stoßstange für die linken Endrohre, montieren Sie die mitgelieferte Halterung.

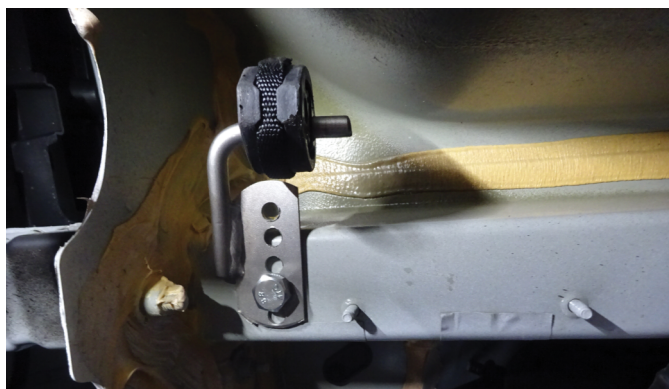**Fig. 6****Fig. 7**

 Infine montate lo scarico.

 Finally mount the exhaust.

 Enfin monter l'échappement.

 In fin montar el escape.

 Montieren Sie den Auspuff.





**HIGH PERFORMANCE
STAINLESS STEEL EXHAUSTS**

Fig. 8

-  Se necessario, proteggere i cavi con dell'isolante.
-  If necessary, protect the cables with insulation.
-  Si nécessaire, protégez les câbles avec un isolant.
-  Si es necesario, proteger los cables con aislante térmico.
-  Bei Bedarf, schützen Sie die Kabel mit Isolierung.



Fig. 9

Fig. 10

Fig. 11